



Outdoor Furniture Care Instructions

Woodwrights Outdoor pieces are designed and crafted for long-term outdoor performance using Iroko timber, marine-grade plywood internal framing, outdoor-grade foams and fibres, and exterior fabrics.

Each piece is individually made to endure New Zealand conditions when correctly cared for and maintained.

Each piece containing Iroko timber has been factory-finished in Sikkens Cetol HLSe oil.

To maintain the integrity and longevity of your furniture:

- Re-oiling is required at least once per annum — or more frequently in coastal, high-UV, or high-rainfall environments.
- Follow the Woodwrights Outdoor Care Guide for correct re-oiling procedures.
- Keep a maintenance log recording oiling dates and products used.
- Failure to maintain or re-oil timber surfaces as recommended will void timber-related warranty coverage.

Note: The Sikkens Cetol HLSe oil finish is a natural protective system requiring ongoing care. Surface weathering, fading, or failure to re-oil is not considered a manufacturing defect.

OUTDOOR CARE INSTRUCTIONS:

- Clean regularly (every 1-2 months in non-coastal environments) with lukewarm water and a soft cloth or sponge.
- Re-Oiling: Apply one maintenance coat of Sikkens Cetol HLSe every 12 months (or more often in harsh conditions). Clean thoroughly, allow to dry, lightly sand, and brush on a thin even coat along the grain. Wipe off excess and allow to dry fully before use. Increase cleaning and oiling frequency in coastal or high-UV locations.
- Store cushions when not in use; never cover or store damp
- Avoid pressure washing, abrasive pads, solvent cleaners, chlorine, bleach or acidic washes.
- Maintain free airflow around stored furniture to prevent mould or mildew.
- When not in use, protect furniture with a breathable outdoor cover to reduce UV and weather exposure. Only cover once the furniture and cushions are completely dry to prevent trapping moisture.
- Record all maintenance activities for warranty validation. furniture.